

Model: BDSR-200


Shooting Rail

Accessory Fits BDL-200



WARNING

- When hunting from a treestand, falls can occur at any time which can cause injury or death. Use a fall arrest system at all times prior to leaving the ground. Never be detached from the tree at anytime.
- Please do not return this product to the retailer. Call BIG DOG TREESTANDS toll free (1-866-387-2002) for quick replacement of any damaged or missing parts.

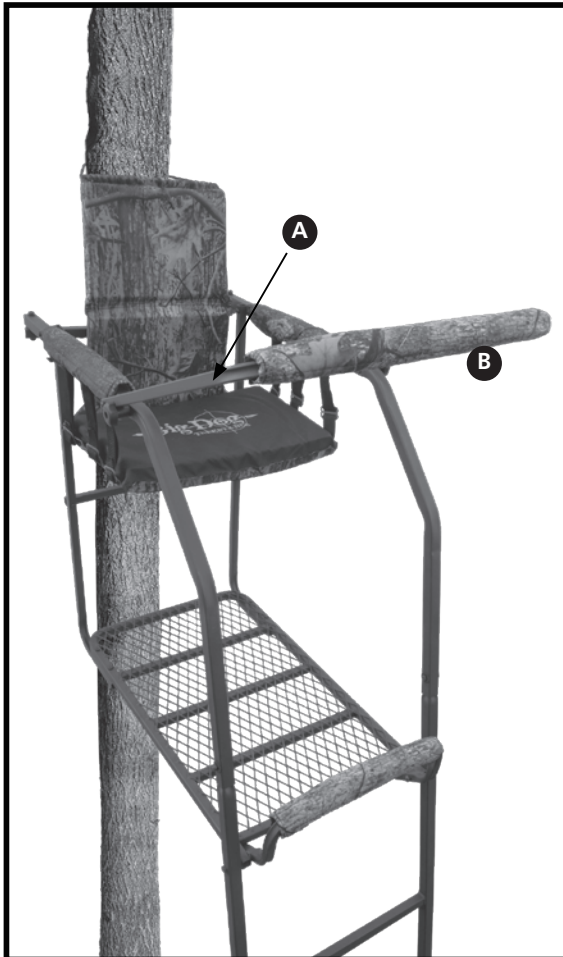

Please inspect the shipping carton for evidence of damage or that it may have been opened before you received it. Then inspect your product carefully. Compare it to the image on the product label and the picture illustration in your instructions. You must check and tighten all bolts before each use. If for any reason you are not satisfied with the product, do not use it until the problem is solved or corrected.

PACKING LIST:

A	1	Shooting Rail	Part # SR-200
B	1	Foam Pad	Part # SRF-300
	2	6mm x 2 - 3/8" Bolt	Part # 1017
	2	6mm x 2" Bolt	Part # 1015
	2	6mm Locknut	Part # 2010
	2	6mm Long Quick Connector	Part # 7020
	2	Thicker Plastic Washer	Part # 4510

ASSEMBLY INSTRUCTIONS

Note: Removing this product from the tree to ground level is required before attaching/adding any accessory items. Obtain/read/understand all warnings/instructions for the the treestand before adding any accessory items to the product.

1. Insert (1) 6mm x 2" Bolt through the FRONT hole (near bend) in the Seat Support Tube and attach (1) 6mm Long Quick Connector to the OUTSIDE of the Seat Support Tube. Repeat on the opposite side.
2. Insert (1) 6mm x 2-1/2" Bolt into the second hole in the Seat Support Tube and attach (1) Thick Plastic Washer to the OUTSIDE of the Seat Support Tube on each side. Next, place the Shooting Rail to the bolts and secure using (1) 6mm Locknut on each side. BOLT STACK: Locknut/Shooting Rail/Thick Plastic Washer/Seat Support Tube.
3. Check all bolts on the stand and tighten securely. Replace any suspected, damaged, or worn bolts/straps/components.
4. Place foam pads to the shooting rail assembly.

WARNING

- Proper threading of straps is critical. Insure all straps are properly threaded and free of damage/wear prior to each use.
- Replace ALL straps (ratchet/button/stabilizing) annually and ALL Hardware (bolts/nuts/cables) every (2) years. Use only Big Dog Treestands certified replacement parts/components, all others are viewed as a modification to the product. Frequently lubricate all hardware/parts or as needed.
- Insure ALL contact points of the treestand/FAS are in contact/secured with the tree before climbing onto the platform. Always test/practice at ground level w/treestand and FAS until comfortable with use of the product.
- Inspect/insure ground under bottom ladder section is firm/level and all sections are connected/pinned together and the adjustable support bar is secured properly prior to each use and prior to leaving the ground. Do not use if sections are seperated.
- It is advisable to replace all straps/ropes each time this product is removed from the tree or at least annually. Do not leave this product attached to any tree for more than (2) weeks due to tree growth.