

Model: 175-8639

Universal Treestand Full Enclosure

Hunting Accessory

Timber Strike®

TREESTANDS

WARNING


- When hunting from any treestand, falls can occur at any time which can cause serious injury or death. ALWAYS use a Fall Arrest System (FAS) at all times prior to leaving the ground. NEVER be detached from the tree for any reason or at any time.
- Please do not return this product to the Menards. Call BIG DOG TREESTANDS toll free (1-866-387-2002) for quick replacement of any damaged or missing parts.



Please inspect the shipping carton for evidence of damage or that it may have been opened before you received it. Then inspect your product carefully. Compare it to the image on the product label and the picture illustration in your instructions. You must check and tighten all bolts before each use. If for any reason you are not satisfied with the product, do not use it until the problem is solved or corrected.

PACKING LIST:

A	1	Roof Fabric	Part # USC-060
B	1	Side Fabric	Part # FC-060
C	1	Front Bar	Part # UFR-050
D	2	Side Bar	Part # SR-060
E	2	Support Brace	Part # SB-060
F	1	Back Bar	Part # BS-060
G	1	Support Frame	Part # HF-060
H	2	Tree Connection Brace	Part # TB-100
I	7	Fiber Poles	Part # UFP-050
J	2	Looped Stabilizing Strap	Part # BSS-225
	2	8mm x 1 - 3/8" Bolt	Part # 1512
	4	6mm x 1 - 3/4" Bolt	Part # 1014
	4	6mm x 1-3/8" Bolt	Part # 1019
	2	6mm x 1" Bolt	Part # 1001
	2	8mm Locknut	Part # 2510
	10	6mm Locknut	Part # 2010
	6	Ground Stakes	Part # GS-060

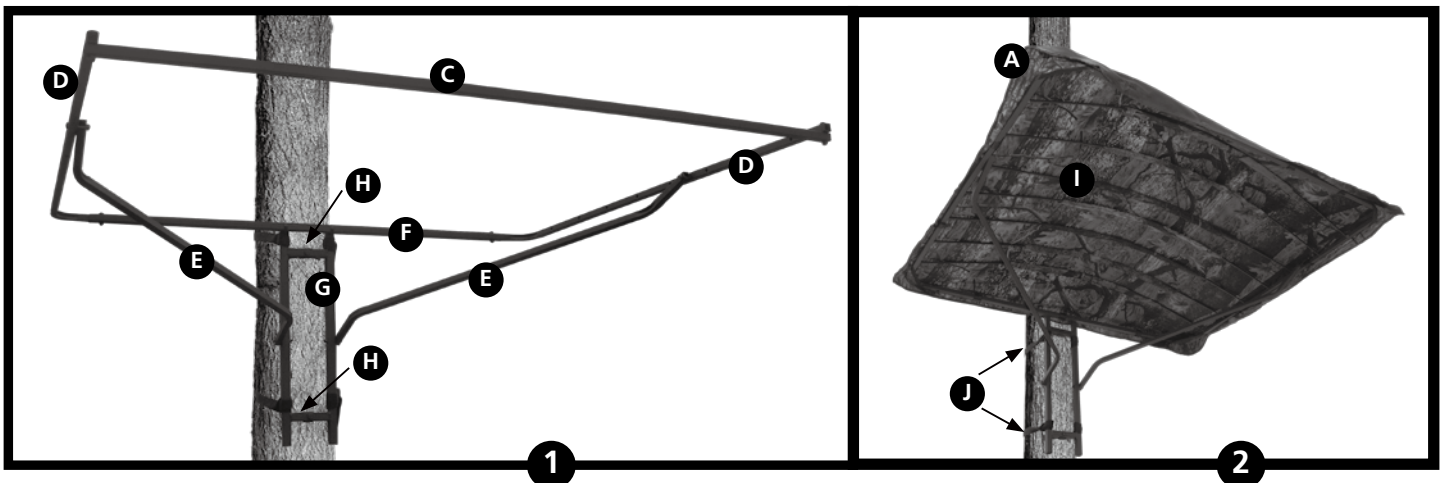

WARNING

- Insure ALL contact points of the treestand/FAS are in contact/secured with the tree before climbing onto the platform.
- Proper threading of straps is critical. Insure all straps are properly threaded and free of damage/wear prior to each use.
- Always test/practice at ground level w/treestand and FAS until comfortable with use of the product.
- Use of a haul line is required when installing/removing to the tree.

Thank you for purchasing Universal Treestand Full Enclosure. This instruction will tell you how to assemble and use the product. Every year hunters are seriously injured in tree stand accidents. Please carefully read and follow these instructions. For missing or damaged parts, please call customer service for fast service at 1-866-387-2002.

ASSEMBLY INSTRUCTIONS

1. Bolt the Back Bar (Item F) to the front side of the Support Frame (Item G) using (2) 6mm x 1-3/4" bolts and locknuts. Next, attach the (2) Tree Connection Brace(s) (Item H) to the short welded tubes on the Support Frame (Item G) on the OPPOSITE side of Back Bar (Item F) using (1) 8mm x 1-3/8" bolt and locknut at each location.
2. Insert the Side Bar (Item D) INTO (INSIDE) the Back Bar (Item F), align the holes in both and secure together using (1) 6mm x 1" bolt and locknut. Repeat for opposite Side Bar (Item D). Next, attach the Front Bar (Item C) to the BOTTOM side of each Side Bar(s) and secure using (1) 6mm x 1-3/8" bolt and locknut on each side. Don't tighten any bolts until assembly is complete.
3. Attach the Support Brace(s) (Item E) to the INSIDE of the Side Bar(s) and secure using (1) 6mm x 1-3/8" bolt and locknut and attach the opposite end to the OUTSIDE of the Support Frame and secure using (1) 6mm x 1-3/4" bolt and locknut on each side. NOTE: Insure the locknuts are to the INSIDE of the Side Bars. IMPORTANT: Wrap tape around all corners and bolt connections to prevent in ripping the roof/side fabric.
4. Insert the Roof Fabric (Item A) to the assembled frame assembly. Insure the Roof Fabric is orientated correctly around the Front & Back Bar. Next, starting at one end, insert the Fiber Poles through the sewn pockets across the Roof Fabric. Next, insert one end of the Fiber Pole into the hole on the Side Bar and then carefully flex the pole upward and insert the opposite end of the Fiber Pole into the opposite Side Bar hole. Repeat on remaining Fiber Poles.
5. Side Fabric (Item B): The Side Fabric ties off to the Roof Frame and behind the tree. To install, locate the center window and work your way around securing the side fabric to the roof frame. Go back through and check all bolts to insure all are securely tightened.


INSTRUCTIONS FOR USE

1. This unit can be used on a treestand or on the ground. In both cases, this unit will need to be installed to a tree. The sewn loops at the bottom are used when used on the ground with the ground stakes supplied.
2. Determine the location of the Roof Assembly in relation to the treestand platform or ground by the length of the side panels in the Side Fabric. Next, secure the top location strap (at upper Tree Connection Brace) around the tree and secure firmly against the tree. See Strap Instructions for attaching and securing the straps. Next, secure the bottom strap to the tree (on second Tree Connection location).
3. Drape the side panels to the outside of the platform area of the treestand. Tie off both sides of the side panels behind the tree. Note: Insure to tie the bottom bungy strap is tied behind the tree located near the bottom. Note: Insure to have the door and window openings un-zipped during attaching to tree for visibility.
4. While facing the Enclosure Assembly, insure the door opening is zipped closed, pull on the bottom bungy until the sides are tight around the platform area. Tie off the loose ends underneath the platform. Moving the Roof assembly up will tighten the side panels after the bottom is secured around platform area. USE OF FALL ARREST SYSTEM (FAS) IS REQUIRED.

ATTACHING INSTRUCTIONS FOR LOOPING



Wrap the sewn loop end of the push button around the tube.

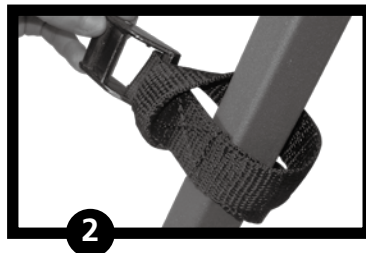

Spread the looped end open and pull the push button through the sewn loop.




Pull the push button tight until the strap is tight around the tube.

STABILIZING STRAP BUCKLE THREADING INSTRUCTIONS



Push button down and thread strap up through bottom of cam buckle

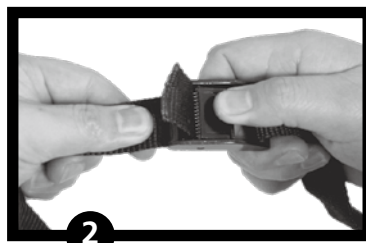

Check strap by pulling downward to make sure strap is tightly secured.



Pull tight and release the cam buckle. Make sure it's secured.

WARNING

- Inspect/insure ground under bottom ladder section is firm/level and all sections are connected/pinned together and the adjustable support bar is secured properly prior to each use and prior to leaving the ground. Do not use if sections are seperated.
- Replace ALL straps (ratchet/button/stabilizing) annually and ALL Hardware (bolts/nuts/cables) every (2) years. Use only Big Dog Treestands certified replacement parts/components, all others are viewed as a modification to the product. Frequently lubricate all hardware/parts or as needed.