

Model: BDUSC-050


Universal Roof Kit XL

Hunting Accessory



WARNING


- When hunting from any treestand, falls can occur at any time which can cause serious injury or death. ALWAYS use a Fall Arrest System (FAS) at all times prior to leaving the ground. NEVER be detached from the tree for any reason or at any time.
- Please do not return this product to the retailer. Call BIG DOG TREESTANDS toll free (1-866-387-2002) for quick replacement of any damaged or missing parts.

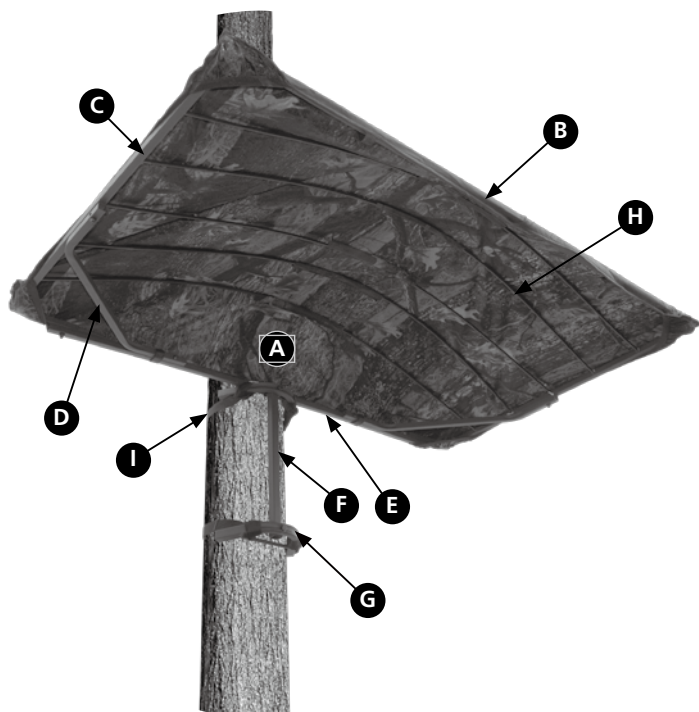

Please inspect the shipping carton for evidence of damage or that it may have been opened before you received it. Then inspect your product carefully. Compare it to the image on the product label and the picture illustration in your instructions. You must check and tighten all bolts before each use. If for any reason you are not satisfied with the product, do not use it until the problem is solved or corrected.

PACKING LIST:

A	1	Fabric Cover	Part # USC-050
B	1	Front Rail	Part # UFR-050
C	2	Side Rail	Part # SR-050
D	2	Support Brace	Part # SB-050
E	1	Back Support	Part # BS-050
F	1	Tree Support Tube	Part # TST-050
G	1	U-Tree Connection	Part # UTC-050
H	5	Fiber Poles	Part # UFP-050
I	2	Button Stabilizing Strap	Part # BSS-225
	2	8mm x 2" Bolt	Part # 1515
	8	6mm x 1 - 5/8" Bolt	Part # 1013
	2	8mm Locknut	Part # 2510
	8	6mm Locknut	Part # 2010

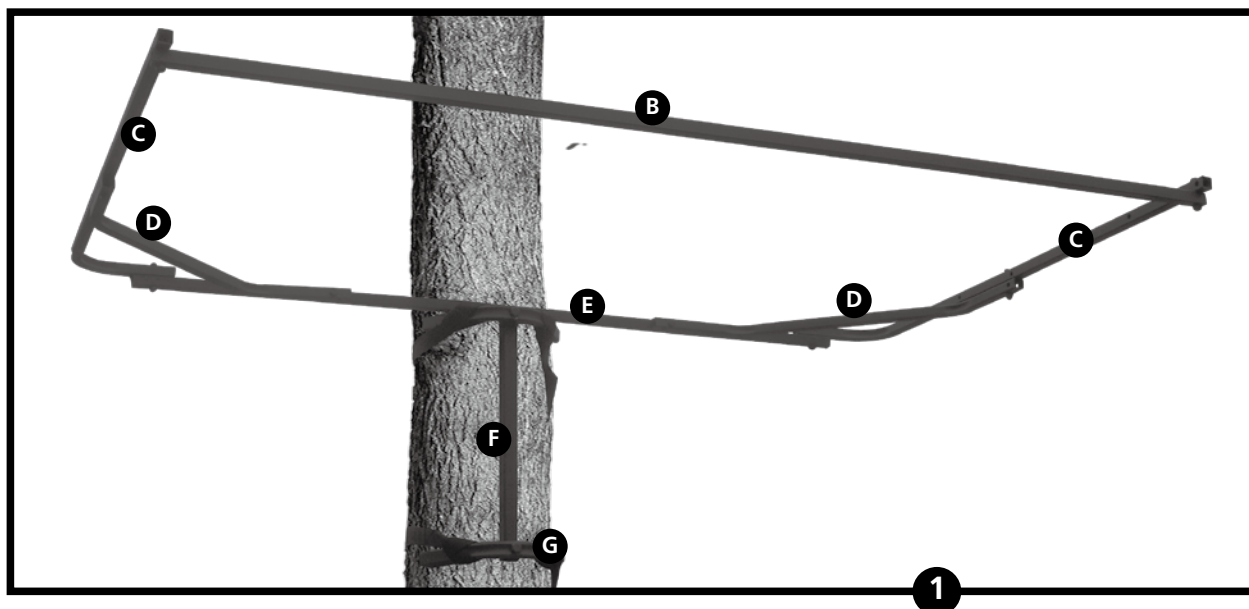

WARNING

- Use of a haul line and FAS is REQUIRED to use/install/remove this product.
- Insure ALL contact points of the treestand/FAS are in contact/secured with the tree before climbing onto the platform.

ASSEMBLY INSTRUCTIONS

1. Bolt the Tree Support Tube (Item F) into the inside of the U brace welded on the Back Support (Item E) using (1) 8mm x 2" bolt and locknut. Note: The long pre-welded tube on the Back Support should be above the Tree Support Tube or facing UP. Next, assemble the U-Tree Connection (Item G) to the front side of the Tree Support Tube (Item F) using (1) 8mm x 2" bolt and locknut. Note: The U-Tree connections should be aligned. **(Fig. 1)**
2. Bolt the short end of the Side Rail (Item C) to the TOP of the Back Support using (1) 6mm x 1-5/8" bolt and locknut on each side. Next, bolt the Support Brace (Item D) to front side of the Back Support and to the BOTTOM side of the Side Rail(s) using (2) 6mm x 1-5/8" bolts and locknuts on each side. Next, bolt the Front Rail (Item B) to the BOTTOM side of both Side Rail(s) using (2) 6mm x 1-5/8" bolts and locknuts. **(Fig. 1)**
3. Tighten all bolts securely. NOTE: Wrap tape around each corner to prevent cover from ripping on the tubing.
4. Layout the Roof Fabric (Item A) and insert the corner pockets in the Fabric Cover over each corner of the frame assembly. Next, insert Fiber Poles into the sewn pockets in the Roof Fabric and one end into hole in the Side rail. Flex the Fiber Pole and insert the opposite end into the hole on the other Side Rail. Repeat on remaining Fiber Poles. Note: Careful not to over-flex the Fiber Poles. May be necessary to remove the paint from the holes in Side Rails to insure proper fit of the fiber poles.

INSTRUCTIONS FOR USE


1. Attach the tree brace support to the tree at the designed height with button stabilizing straps. Pull the both straps tight until the straps are tight and the tree stand cover is secure to the tree. Tie off all loose end straps. Refer to the stabilizing strap buckle threading instruction for proper threading. Please refer to threading instructions, assembly illustrations, and product diagram for correct locations/orientation of ALL straps/ropes, adj. support bar, and positioning of stand. Please call if any questions/concerns on product use.

ATTACHING INSTRUCTIONS FOR LOOPING




1

Wrap the sewn loop end of the push button around the tube.

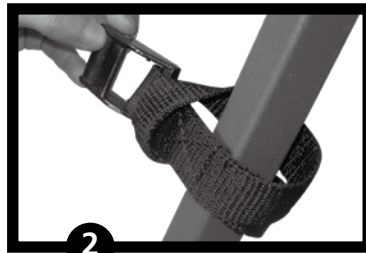

2

Spread the looped end open and pull the push button through the sewn loop.

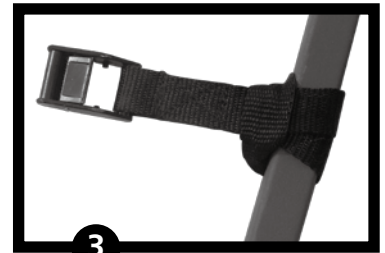

3


Pull the push button tight until the strap is tight around the tube.

STABILIZING STRAP BUCKLE THREADING INSTRUCTIONS



1

Push button down and thread strap up through bottom of cam buckle

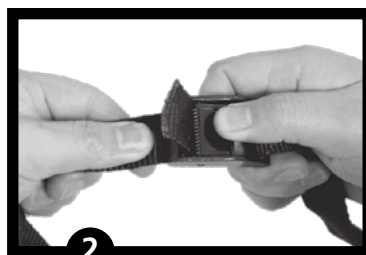

2

Check strap by pulling downward to make sure strap is tightly secured.



3

Pull tight and release the cam buckle. Make sure it's secured.

WARNING

- Inspect/insure ground under bottom ladder section is firm/level and all sections are connected/pinned together and the adjustable support bar is secured properly prior to each use and prior to leaving the ground. Do not use if sections are seperated.
- Replace ALL straps (ratchet/button/stabilizing) annually and ALL Hardware (bolts/nuts/cables) every (2) years. Use only Big Dog Treestands certified replacement parts/components, all others are viewed as a modification to the product. Frequently lubricate all hardware/parts or as needed.
- Always test/practice at ground level w/treestand and FAS until comfortable with use of the product.
- Proper threading of straps is critical. Insure all straps are properly threaded and free of damage/wear prior to each use.